


2 PUMP - 3 DUMP SETUP

FRONT PUMP USING 3 SOLENOIDS, REAR PUMP USING 3 SOLENOIDS

TX2RX AUTOMOTIVE WIRELESS SOLUTIONS

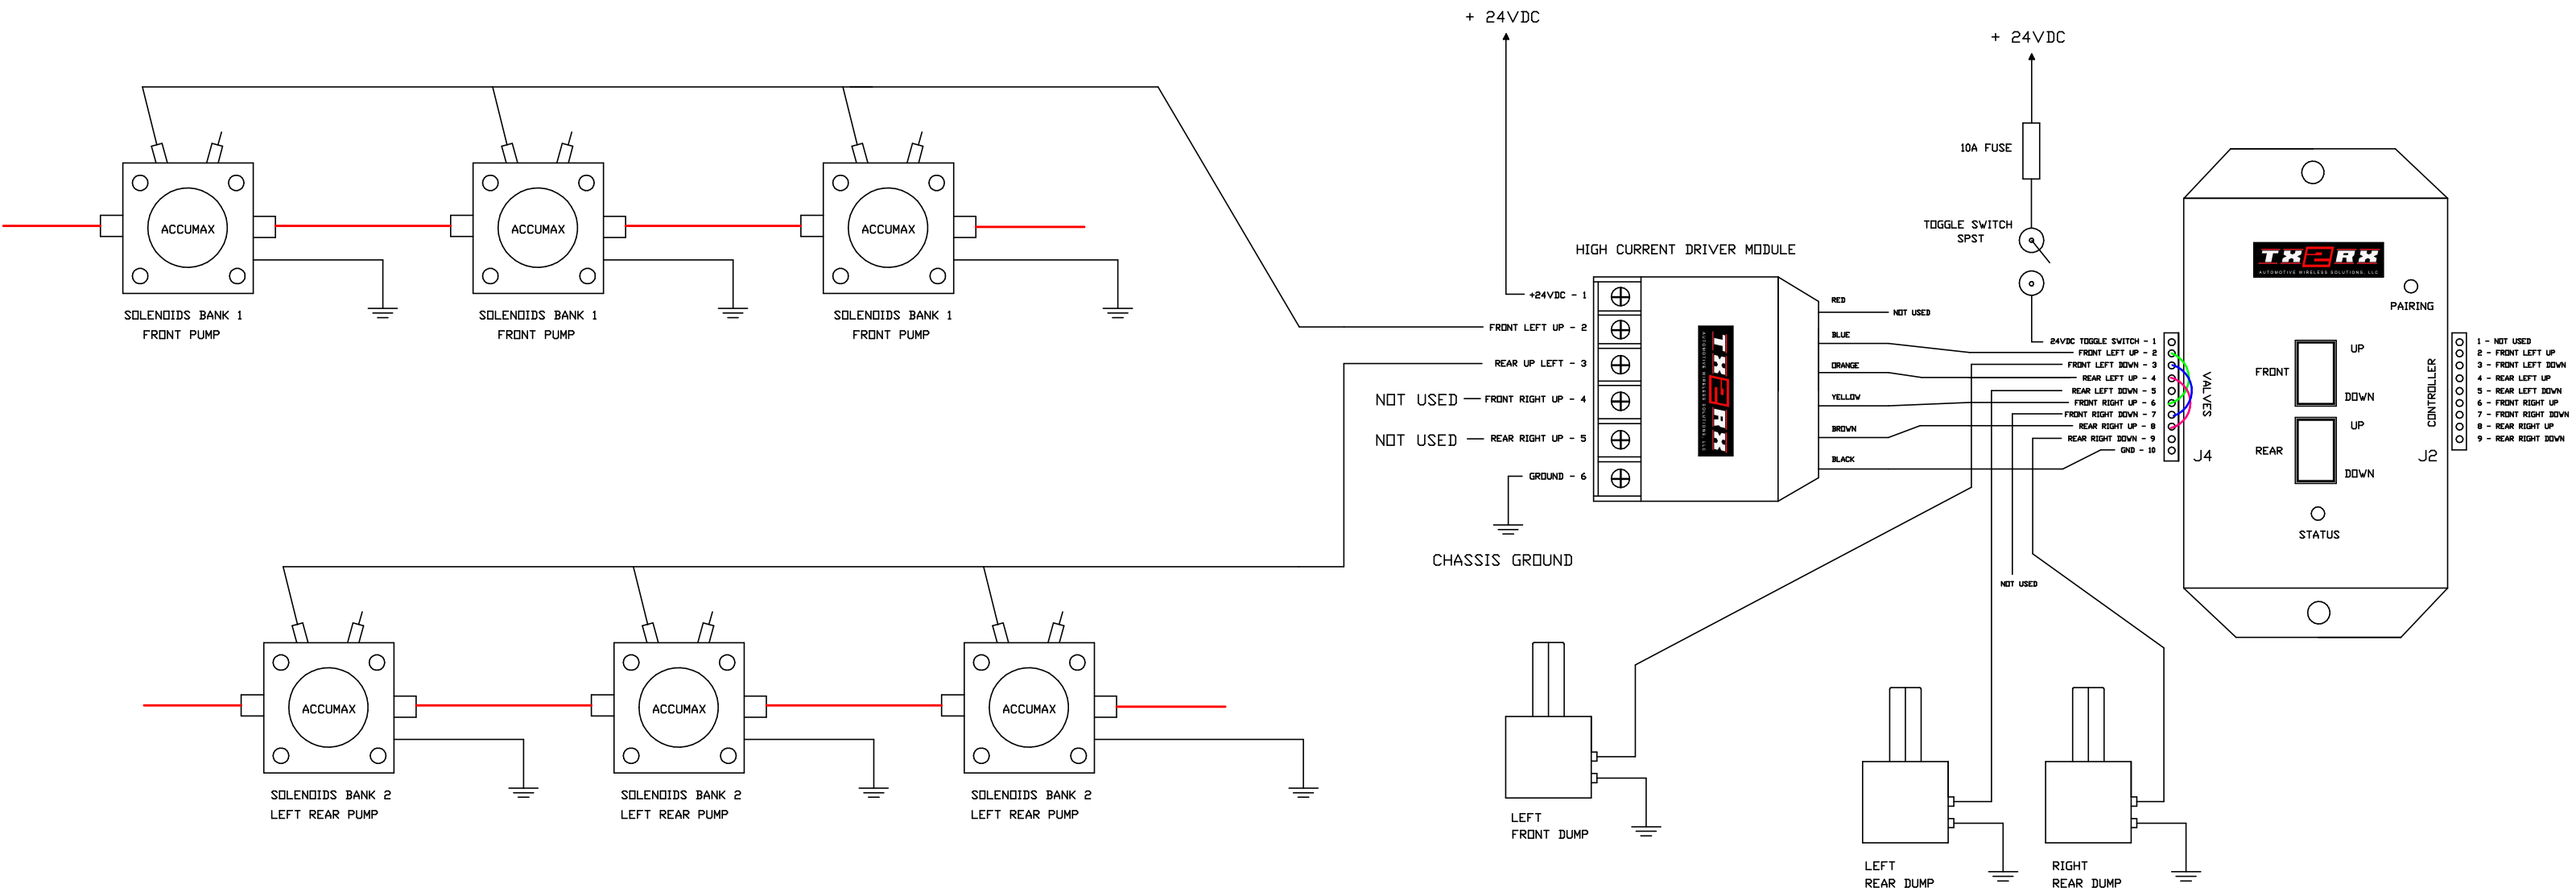

WIRING DIAGRAM NOTES:	
2 AND 6 TOGETHER (FRONT UP)	ALLOWS USE OF BOTH FRONT UP REMOTE BUTTONS
3 AND 7 TOGETHER (FRONT UP)	ALLOWS USE OF BOTH FRONT DOWN REMOTE BUTTONS
4 AND 8 TOGETHER (REAR UP)	ALLOWS USE OF BOTH REAR UP REMOTE BUTTONS
JUMPER WIRE ARE NOT REQUIRED. IT ALLOWS EITHER LEFT OR RIGHT REMOTE BUTTONS TO OPERATE.	